



RH SEED CURTIAN INSTALLATION



Revision History

rev. level 01_08.06.2014




RH SEED CURTAIN - LINER ASSEMBLY

Step 1: Remove the Liner Assembly from the carton. Inspect for damage.




SEED INLET TRANSITION

Step 1: Unlatch the Transition latches and remove it from beneath the Atomizer Housing.

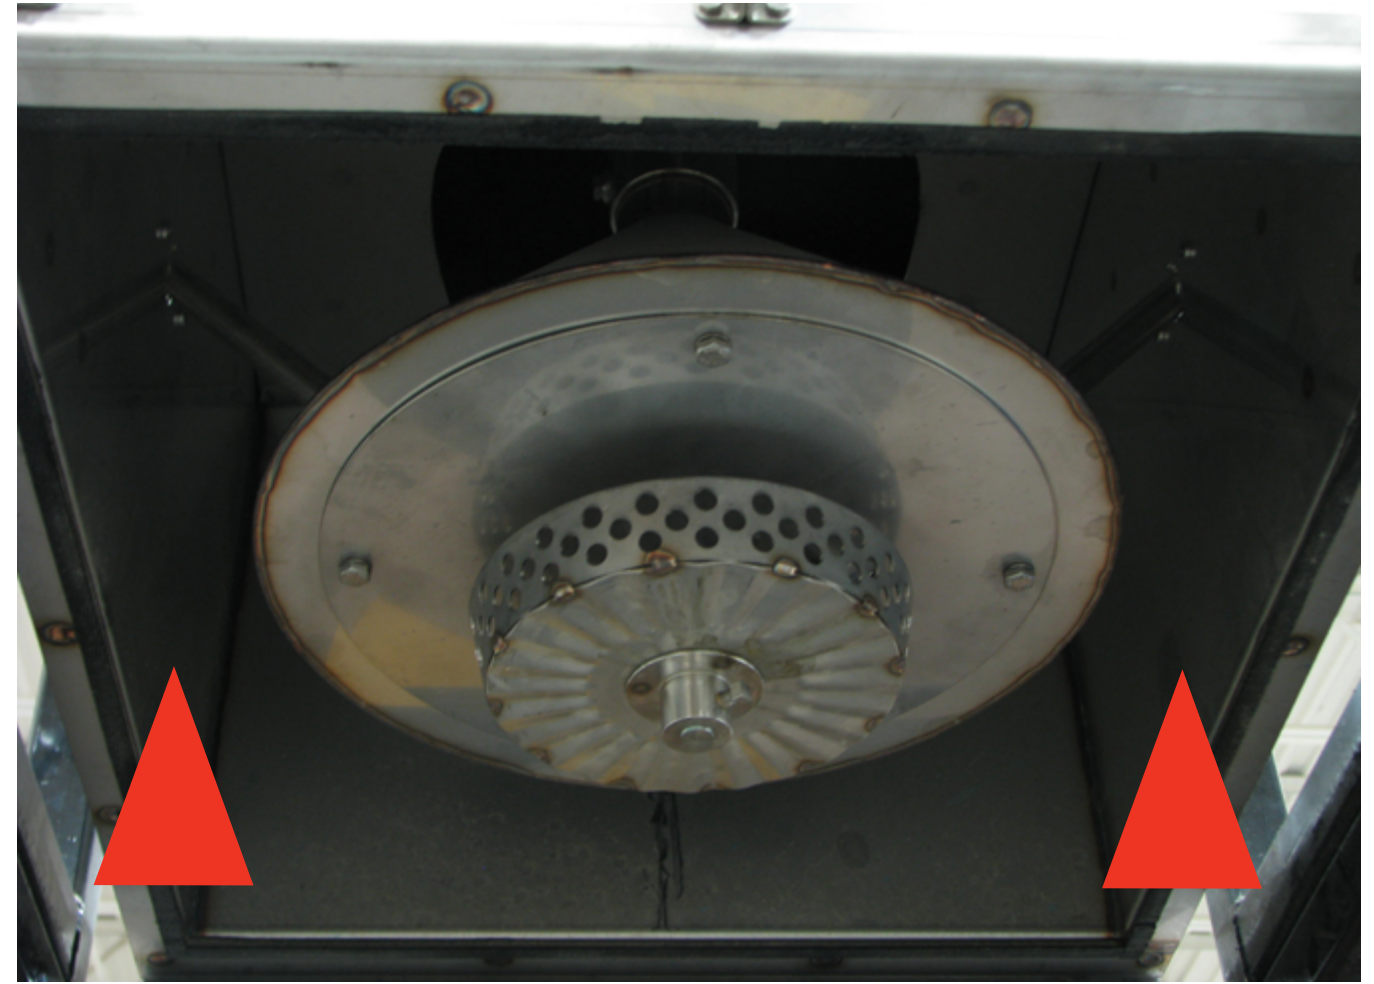

ATOMIZER HOUSING

Step 1: Use a putty knife to scrape and clean the interior of the Atomizer Housing.

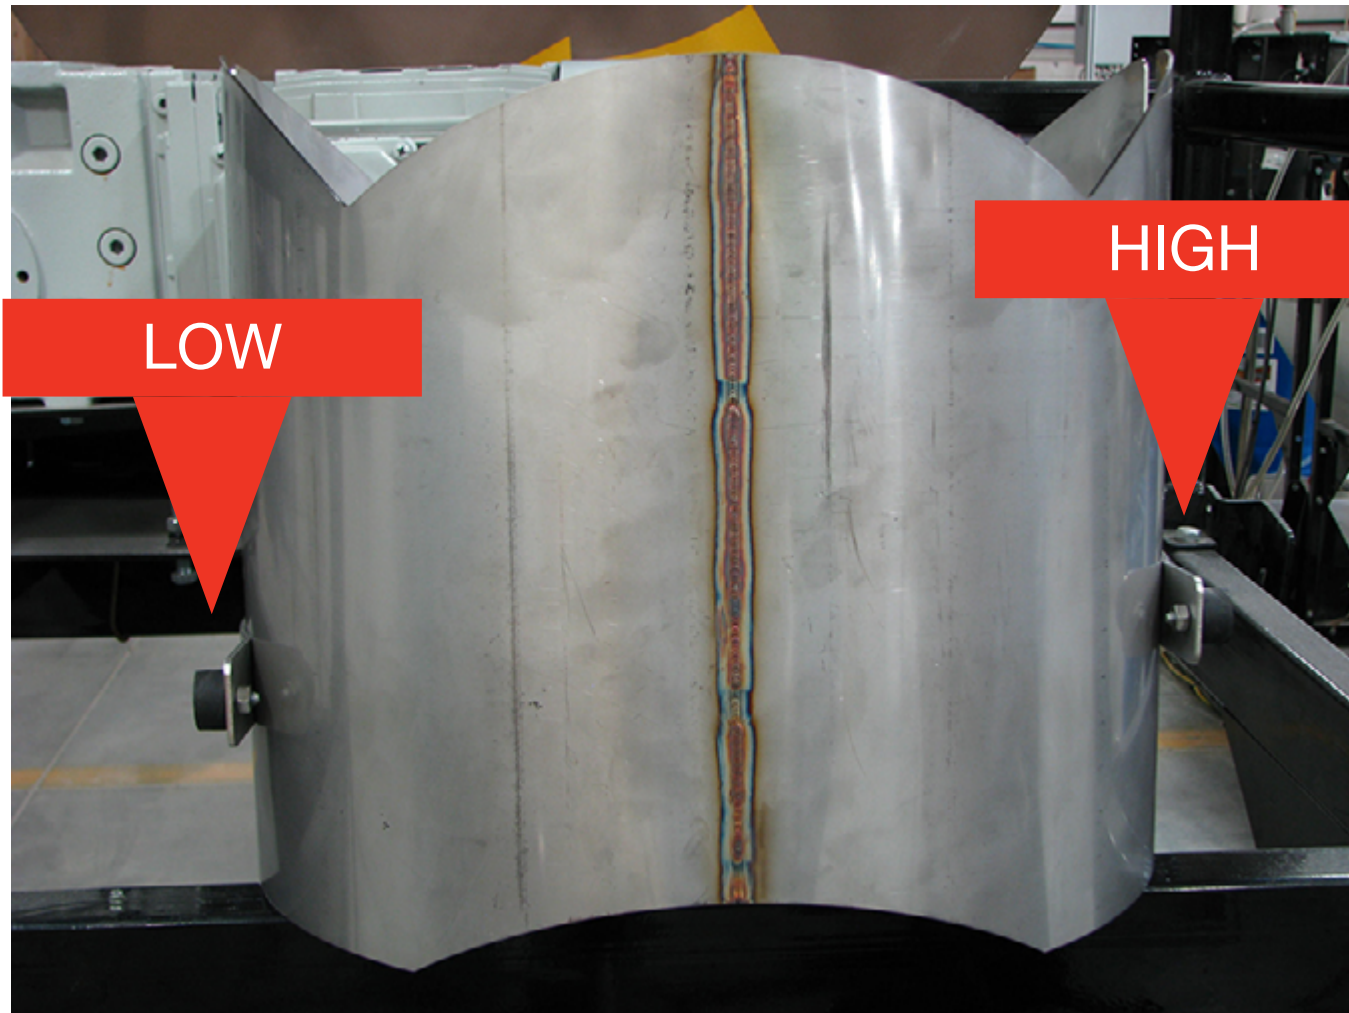

LINER ASSEMBLY

Step 1: Orient the Liner Assembly, so that the right rubber foot is higher than the left side, as shown.



INSERT LINER ASSEMBLY

Step 1: Lift the Liner Assembly up into the Atomizer Housing, inserting the cut-out grooves over the conduit tube and the chemical inlet tube.



LINER ASSEMBLY

Step 1: Push the right rubber foot in and push up on the Liner.

Step 2: Then repeat for the left side.

Step 3: Then slide entire liner up until it stops.



SEED INLET TRANSITION

Step 1: Replace the Transition up underneath the Atomizer Housing and lock it in place.





Bayer

Crop Science Division
1451 Dean Lakes Trail
Shakopee,
Minnesota 55379
USA

For fast and easy access to
our website scan the code with
your smartphone and an
appropriate app.

www.seedgrowth.bayer.com